

Fixed Speed Type (Wall-mounted) trouble shooting guide

Technical Service Dep. (2012)

No.	problem	indoor code	outdoor display	Solution
1	Room temperature sensor fault	E1	/	1.check whether the sensor is in the right position and connected to PCB properly 2.If position is right, then the sensor must be broken and need to be replaced
2	Outdoor coil temperature sensor fault	E2	/	1.check whether the sensor is in the right position and connected properly 2.If position is right, then the sensor must be broken and need to be replaced
3	Indoor coil temperature sensor fault	E3	/	1.check whether the sensor is in the right position and connected to PCB properly 2.If position is right, then the sensor must be broken and need to be replaced
4	indoor fan motor feedback fault	E4	/	1.check whether the wire of indoor fan motor are well connected 2.check whether the indoor fan motor work well or not. 3.If both Point 1 and 2 are ok, then the indoor control box is broken